

SELF CLEANING


The self-cleaning feature cleans inside the plate, removing impurities. We recommend using it every 10–15 days. Directions:

- Fill the water reservoir up to the maximum level indicated and set the steam selector to “OFF”.
- Set the thermostat knob to the maximum temperature and wait for the light to turn off.
- Pull the plug out of the socket and hold the iron horizontally over the sink.
- Hold the self-clean button setting until all the boiling water, steam and impurities come out.
- When the soleplate has cooled down, you can clean it with a damp cloth.

HOW TO STORE

- Disconnect the plug of the iron from the wall outlet.
- Leave the iron to cool down completely.
- Empty the water reservoir by turning the iron upside down over a sink and gently shaking it.
- Always put the iron away in a vertical position.

GET TO KNOW YOUR EXTREME STEAM™ IRON (MODEL GI100)

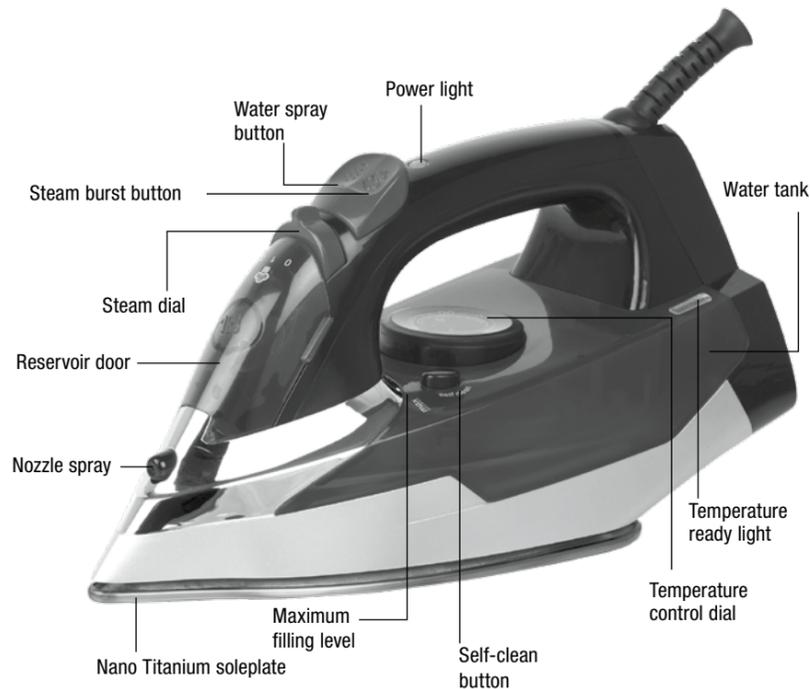

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

DANGER — Any appliance is electrically live even when the switch is off.

To reduce the risk of death by electric shock:

1. **Always unplug appliance immediately after use and before cleaning.**
2. Do not place or store appliance where it can fall or be pulled into a tub or sink.
3. Do not place in, or drop into water or other liquid.
4. Do not reach for an appliance that has fallen into water. **Unplug immediately.**
5. Use only in a dry area.

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. **This appliance is not a toy and should not be used by children.**
3. Close supervision is necessary when this appliance is used near children or individuals with certain disabilities. Unsupervised use could result in fire or personal injury.
4. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Conair.

5. Always position iron carefully to prevent it from falling if ironing board is accidentally moved or cord is pulled. Always rest the appliance upright on its heel rest, on a stable surface, when not in use.

6. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. Do not attempt to repair the appliance. Incorrect reassembly or repair could cause a risk of fire, electric shock, or injury to persons when the appliance is used. Return the appliance to an authorized service center for examination and repair.**

7. Do not allow cord to contact heated surfaces. Do not pull or twist cord. Let appliance cool completely before emptying or putting away. Wrap the cord loosely around the iron when storing.

8. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

9. Never drop or insert any object into any opening.

10. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

11. We recommend you do not use an extension cord to operate this appliance. If an extension cord is absolutely necessary, a 15 ampere rated cord should be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care should be taken to arrange the cord so that the

cord cannot be pulled or tripped over.

12. Surfaces of this appliance are hot when in use. Do not let heated surfaces touch eyes or skin.

13. Do not place the soleplate directly on any surface or on the appliance power cord while it is hot or plugged in.

14. Unplug this appliance and allow to cool before filling or emptying the water reservoir and when the iron is not in use.

15. Do not operate steamer without properly filling the water tank with water.

16. The iron should always be turned off before plugging in or unplugging from an outlet. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.

17. Burns could occur from touching hot metal parts, hot water, or steam. Use caution when turning a steam iron upside down to empty water, as there may be hot water in the reservoir.

18. If you need to clean the iron, unplug and allow to cool. Use a slightly damp cloth and wipe down the outside of the iron. DO NOT use cleaning agents or place the iron in water or cleaning fluids.

19. Do not hold hand in front of steam.

20. To reduce likelihood of circuit overload, do not operate another high-wattage appliance on the same circuit.

21. Never steam or iron clothes you, or someone else, are wearing.

22. When emitting steam, this appliance may cause burns if it is used too close to the skin or eyes, or if it is used incorrectly. To reduce the risk of contact with hot water emitting from the steam vents, test appliance before use by holding it away from the body.

SAVE THESE INSTRUCTIONS IMPORTANT FOR HOUSEHOLD USE ONLY

DO NOT let children or untrained persons use the appliance without supervision.

NEVER immerse the iron, cable or plug in any liquids.

DO NOT leave the hot iron touching fabrics or very inflammable surfaces.

DO NOT leave the appliance unnecessarily plugged in. Disconnect the plug from the outlet when the appliance is not being used.

NEVER touch the appliance with wet or damp hands.

DO NOT use the power cord or the appliance in order to pull the plug out of the socket.

DO NOT leave the appliance exposed to the weather (rain, sun, etc.).

DO NOT leave the iron without supervision when it is connected to the power supply.

DO NOT fill the reservoir with water before removing the plug from the socket.

PLEASE NOTE!

Do not use chemical additives, scented substances or decalcifiers. Failure to comply with the above-mentioned regulations leads to the loss of warranty.

Read the following instructions carefully before you use your iron for the first time. Once you have familiarized yourself with this appliance, please save this instruction manual for future reference.

LIMITED ONE-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back that is nearest you, together with your purchase receipt and \$12.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.



Service Centers

Conair Corporation Service Department 150 Milford Road East Windsor, NJ 08520	Conair Corporation Service Department 7475 N. Glen Harbor Blvd. Glendale, AZ 85307
--	---

For information on any Conair product, call 1-800-3-CONAIR or visit us on the web at www.conair.com

Please register this product at www.conair.com/registration

©2018 Conair Corporation
East Windsor, NJ 08520
Glendale, AZ 85307
Made in China

18PA050530

IB-15504

EXTREME STEAM™
WITH NANO TITANIUM SOLEPLATE



Instruction Booklet

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

CONAIR®

All GI100 Models

4. Once the iron heats up, it is ready to use.
5. After use, turn iron off, unplug, and let the iron cool for 10 minutes before emptying water and putting it away.

AUTO OFF

As a safety feature, your iron will turn off automatically if left in the upright position and not moved for eight minutes, or left in the horizontal position and not moved for thirty seconds.

GENERAL INSTRUCTIONS

When using the iron for the first time, you may notice a slight emission of smoke, and hear some sounds made by the expanding plastics. This is quite normal and it stops after a short time. We also recommend passing the iron over an ordinary cloth before using it for the first time.

ANTI-CALC SYSTEM

A special resin filter inside the water reservoir softens the water and prevents scale buildup on the plate. The resin filter is permanent and does not need replacing.

Please Note:
DO NOT use chemical additives, scented substances or decalcifiers. Failure to comply with this regulation leads to the loss of warranty.

ANTI-DRIP SYSTEM

With the Anti-Drip System, you can perfectly iron even the most delicate fabrics.

Always iron these fabrics at low temperatures. The plate may cool down to the point where no more steam comes out, but rather drops of boiling water that can leave marks or stains. In these cases, the Anti-Drip System automatically activates to prevent vaporization, so that you can iron the most delicate fabrics without risk of spoiling or staining them.

DRY IRONING

To iron without steam, leave the steam selector on position “0”.

SPRAY FUNCTION

Make sure that there is water in the reservoir. Press the spray button slowly (for a dense spray) or quickly (for a vaporized spray).

WARNING: For delicate fabrics, we recommend moistening the fabric beforehand, using the spray function, or putting a damp cloth between the iron and the fabric.

To avoid staining, do not use the spray on silk or synthetic fabrics.

CLEANING

Please Note: Before cleaning the iron in any way, make sure that the appliance plug is not connected to the outlet.

Any deposits or starch residue left on the plate can be removed using a damp cloth or a nonabrasive liquid detergent after it has cooled.

Avoid scratching the plate with steel wool or metallic objects.

The plastic parts can be cleaned with a damp cloth, then wiped over with a dry cloth.

FUNCIÓN DE LIMPIEZA AUTOMÁTICA

La función de limpieza automática elimina las impurezas dentro de la suela. Recomendamos usarla cada 10 a 15 días. Modo de empleo:

- Llene el depósito de agua hasta la línea “MAX” y ponga el selector de vapor en “0”.

- Ajuste la temperatura al nivel máximo y espere hasta que la luz de listo se apague.

- Desenchufe el aparato y sosténgalo horizontalmente encima del fregadero.

- Mantenga oprimido el botón SELF-CLEAN hasta que salga toda el agua hirviendo, el vapor y las impurezas.

- Después de que se haya enfriado, limpie la suela con un paño húmedo.

ALMACENAJE


- Desenchufe la plancha.

- Permita que la plancha se enfríe completamente.

- Vacíe el depósito de agua, volteando la plancha boca abajo encima del fregadero y sacudiéndola suavemente.

- Guarde la plancha, colocándola siempre en posición vertical.

FAMILIARÍCESE CON SU PLANCHA EXTREME STEAM™ (MODELO GI100)

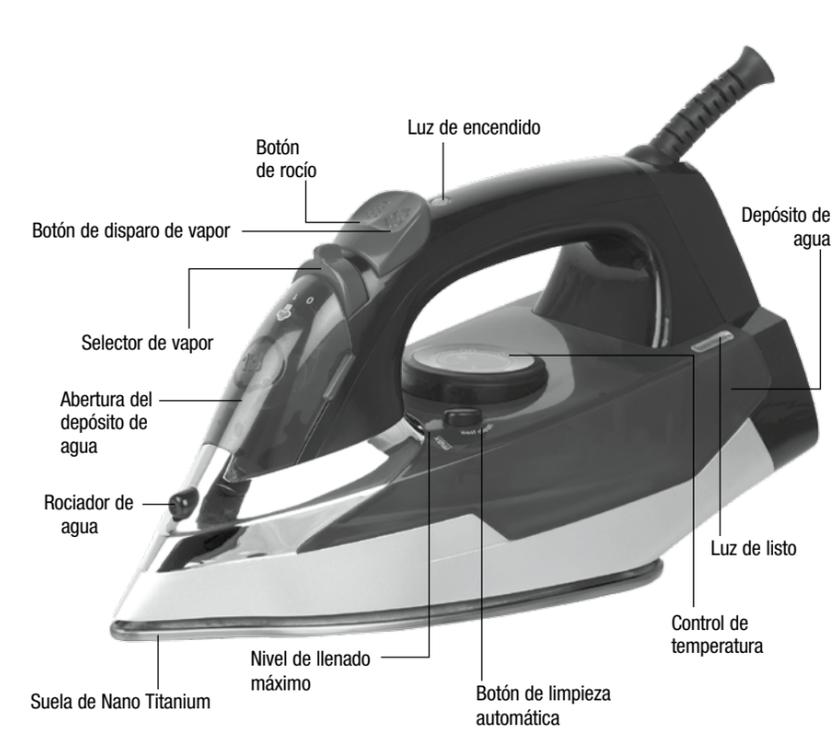

incendio o una herida.

4. Utilice este aparato únicamente con propósito para el cual fue diseñado y solamente según las instrucciones. Solo use accesorios recomendados por Conair.

5. Coloque la plancha de manera que no se pue caer si alguien tropieza la mesa de planchar o jala el cable. Cuando no está en uso, siempre coloque el aparato en posición vertical, en su talón de descanso, sobre una superficie estable.

6. **No utilice este aparato si el cable o el enchufe están dañados, si no funciona correctamente, si está dañado, o después de que se haya caído, incluso en el agua; No intente reparar el aparato. El ensambalar las partes de manera incorrecta aumenta los riesgos de incendio, descarga eléctrica y heridas. regréselo a un centro de servicio autorizado para su revisión y reparación.**

7. No permita que el cable tenga contacto c superficies calientes. No jale ni retuerza el cable. Permita que el aparato se enfríe completamente antes de vaciar el depósito o guardarlo.

8. El cable de este aparato está dotado de enchufe polarizado (una pata es más ancha que la otra). Como medida de seguridad, aquel enchufe se podrá enchufar de una sola manera en las tomas de corriente polarizadas. Si no entra en la toma de corriente, inviértalo. Si aun así no entra completamente, comuníquese con un electricista. No intente ir en contra de esta función de seguridad.Enrolle el cable sin apretar alrededor del aparato para guardarlo.

9. Nunca deje caer ni inserte ningún objeto ninguna de las aberturas.

10. No utilice el aparato en exteriores, ni lo h funcionar donde se estén usando productos en aerosol (spray) o donde se esté administrando oxígeno.

11. Recomendamos que no use una extens con este aparato. Si debe usar el aparato con una extensión, utilice una extensión de 15

amperios. Una extensión de menor amperaje puede calentar excesivamente, presentando un riesgo de incendio o descarga eléctrica. Coloque la extensión de manera que nadie la pueda jalar o tropezar con ella.

12. Las superficies de este aparato se ponen calientes durante el uso; mantenga los ojos y la piel alejados de las superficies calientes.

13. No coloque la suela sobre ninguna superfi mientras está caliente o mientras la plancha está conectada, y manténgala alejada del cable eléctrico.

14. Desenchufe el aparato y permita que se enf antes de llenar o vaciar el depósito de agua y cuando la plancha no está en uso.

15. Siempre llene el depósito de agua con a antes de encender el aparato.

16. Asegúrese de que el aparato está apag antes de enchufar o desenchufarlo. Nunca jale el cable para desconectarlo; agárrelo por la clavija.

17. Las piezas metálicas calientes, el a caliente y el vapor pueden causar quemaduras. Tenga cuidado al voltear la plancha para vaciar el depósito de agua, puesto que este puede contener agua caliente.

18. Desenchufe el aparato y permita que se enf antes de limpiarlo. Limpie la superficie externa en las tomas de corriente polarizadas. Si no entra en la toma de corriente, inviértalo. Si aun así no entra completamente, comuníquese con un electricista. No intente ir en contra de esta función de seguridad.

19. No ponga la mano frente al vap

20. Para evitar las sobrecargas eléctricas, conecte otro aparato de alta potencia al mismo circuito eléctrico.

21. Nunca use el aparato en prendas que uste alguien lleven puestas.

22. El vapor que sale de la boquilla durante el puede causar quemaduras si usa la unidad muy cerca de la piel, del cuero cabelludo o de los ojos, o si la usa en forma incorrecta. Para reducir e riesgo de quemaduras, pruebe el vapor lejos de su cuerpo antes de usar el aparato.

GARANTÍA LIMITADA DE UN AÑO (VÁLIDA EN LOS EE. UU. Y EN CANADÁ SOLAMENTE)

Conair reparará o reemplazará (a su opción) su aparato sin cargo por un período de 12 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado a continuación, junto con su recibo de compra y un cheque o giro postal de US\$12.00 para cubrir los gastos de manejo y envío. Los residentes de California solo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 12 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 12 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

GUARDE ESTAS INSTRUCCIONES IMPORTANTES PARA USO DOMÉSTICO SOLAMENTE

NO permita que niños o personas inexpertas usen este aparato sin supervisión.

NUNCA sumerja la plancha, el cable o el enchufe en ningún líquido.

NO deje la plancha caliente en contacto con telas o superficies muy inflamables

NO deje el aparato enchufado cuando no lo usa.

NUNCA toque el aparato con las manos mojadas o húmedas

NO jale el cable o el aparato para desconectar el enchufe de la toma de corriente.

NO deje el aparato expuesto a la intemperie (lluvia, sol, etc.).

NO deje la plancha sin supervisión cuando esté conectada a la fuente de alimentación.

NO llene el depósito de agua antes de haber desenchufado en aparato primero.

¡IMPORTANTE!

No utilice aditivos químicos, sustancias perfumadas o descalcificadores. El incumplimiento de estas instrucciones anulará la garantía.

Lea atentamente el modo de empleo antes de utilizar este aparato por primera vez. Guarde el modo de empleo para futura referencia.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.



Centros de servicio	
Conair Corporation Service Department 150 Millford Road East Windsor, NJ 08520	Conair Corporation Service Department 7475 N. Glen Harbor Blvd. Glendale, AZ 85307

Para más información sobre los productos

Conair, llame al 1-800-3-CONAIR o visítenos en **www.conair.com**

Para registrar su producto, visítenos en: **www.conair.com/registration**

©2018 Conair Corporation East Windsor, NJ 08520 Glendale, AZ 85307 Hecho en China	
18PA050530	IB-15504



5. Después del uso, apague la plancha, desenchúfela, y permita que se enfríe por 10 minutos o más antes de vaciar el agua y guardarla.

APAGADO AUTOMÁTICO

Como medida de seguridad, el aparato se apagará automáticamente (si no detecta actividad después de 8 minutos en posición vertical, o después de 30 segundos en posición horizontal).

INSTRUCCIONES GENERALES

Quando use la plancha por primera vez, puede que note un poco de humo y escuche unos sonidos (producidos por la expansión del plástico); esto es normal y cesará al poco tiempo. Recomendamos pasar la plancha sobre un paño antes de usarla por primera vez.

SISTEMA ANTICAL/ANTISARRO

Esta plancha está equipada con un filtro de resina especial, situado dentro del depósito de agua, que suaviza el agua para evitar la acumulación de cal en la suela. El filtro de resina es permanente y no necesita ser reemplazado.

Importante: NO utilice aditivos químicos, sustancias perfumadas o descalcificadores. El incumplimiento de estas instrucciones anulará la garantía.

SISTEMA ANTIGOTEO

Con el sistema antigoteo, puede planchar a la perfección inclusive los tejidos más delicados.

Siempre planche estos tejidos a bajas temperaturas. Por lo general, cuando la temperatura de la plancha baja y esta deja de producir vapor, gotas de agua pueden salir de los agujeros en la suela, dejando marcas o manchas en la ropa. El sistema antigoteo se activa automáticamente al bajar la temperatura de la plancha, para evitar que esto ocurra. Gracias a él, puede planchar los tejidos más delicados sin riesgo de estropearlos o mancharlos.

EXTREMESTEAM™



Manual de instrucciones

Para su seguridad y para disfrutar plenamente de este producto, siempre lea cuidadosamente las instrucciones antes de usarlo.



CONAIR®

Modelos GI100 (todas las versiones)



PLANCHADO EN SECO
Para planchar en seco (es decir, sin vapor), deje el selector de vapor en “0”.

FUNCIÓN DE ROCÍO

Cerciórese de que hay agua en el depósito. Presione el botón de rocío despacio para conseguir un rocío denso, o rápido para conseguir un rocío ligero/aireado.

ADVERTENCIA: le recomendamos que humedezca los tejidos delicados (usando la función de rocío) antes de plancharlos, o que coloque un paño húmedo entre la plancha y la tela.

No recomendamos usar la función de rocío en seda o tejidos sintéticos, ya que el agua puede mancharlos.

LIMPIEZA

Importante: cerciórese de que el aparato está desenchufado antes de limpiarlo.

Después de que se haya enfriado, quite los depósitos o residuos de almidón de la suela con un paño húmedo o un detergente líquido no abrasivo.

Procure no usar lana de acero u objetos metálicos, los cuales pueden rayar la suela.

Limpie las piezas de plástico con un paño húmedo y, luego, séquelas con un paño seco.